

Quick Setup **Guide**



Cryptocash
ATM

1. Cryptocash ATM assembly




1

Remove from docking station



2

Open front door

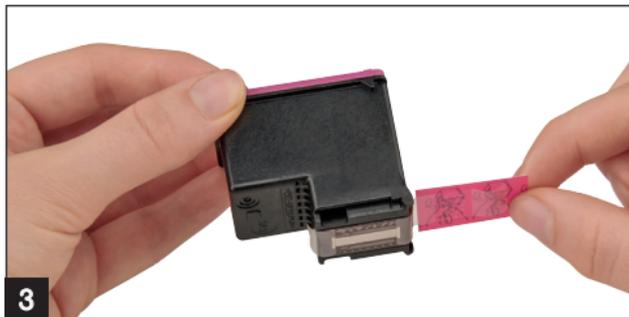

3

Remove film from print head



4

Insert cartridge

Be careful,
do not touch
any contacts or
the print head!



5

Close front door and charge for 2 hours



6

Switch on



7

Print your SSID & Password!



8

Put the Cryptocash ATM always back into the docking station after printing!

2. Download and setup your **Cryptocash wallet app**

Download on Google Play
or AppStore:





Optional registration:

If you want to take advantage of the digital signature feature for the back of the Decentralized currency note, you need to register your personal information and identify yourself.

3. Connect your **Cryptocash ATM**

Click on “Login using QR-code”
and scan the QR code...

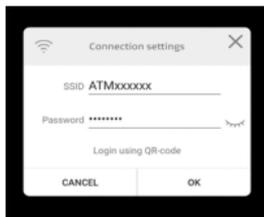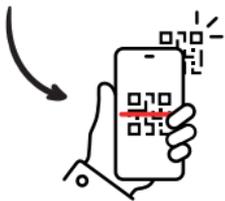

...or manually enter the **SSID and password**,
which can be found on any of these 3 places:



4. Print your first decentralized currency note



1 Open the Cryptocash Wallet app and enter your passcode to access your account (or use biometrics if enabled).



2 Select the "ATM Print" option from the main menu or from the menu of specific currency.



3 Select or enter the amount you want to convert into a decentralized currency note.



4 Wait for the Cryptocash ATM to connect. Position your device on the note and swipe right until you hear a beep.

5. Light indicators



Blue position LEDs

Use the blue lights to position your imprint. The light shows the top and bottom of your imprint.



Battery indicator

green 41 - 100 %, **yellow** 11 - 40 %, **red** 0 - 10 %



Wifi connection indicator

blue: active Wifi connection
no light: no connection



Printing indicator

green: ready to print; all lights **blinking red:** cartridge empty, no cartridge, device error



	Behaviour	Description
	Beep once	Print job transmitted
	Beep twice	Print is complete, Cleaning cycle finished
	Beep continuously	Print head warning: put it back on the docking station
	Beep continuously	Error - switch it off/on

6. Print head cleaning

The cartridge is a sensitive part and requires special care. Especially when the Cryptocash ATM is not used on a daily basis, more intensive cleaning is necessary. We recommend weekly cleaning.

Automatic cleaning cycle

Whenever the Cryptocash ATM is taken from the docking station, the print head is cleaned automatically. The intensity of cleaning increases the longer the Cryptocash ATM is not used.

1. Take Cryptocash ATM from docking station
2. Hold briefly in the air (wait for ink to disperse)
3. Put on paper & print!

Before printing, we recommend doing a test imprint.

Manual print head cleaning

1. Take a slightly dampened piece of cloth (only pure water, no cleaning agent!)
2. Take the Cryptocash ATM out of the docking station
3. Wipe the print head from top to bottom (never sideways, as this could damage the cartridge)

For a more intense clean try the quick cleaning in the app.



7. The Cryptocash ATM at a glance

- 1** Front door
- 2** Print head of cartridge
- 3** Sliding wheels
- 4** Magnets
- 5** Reset hole
- 6** Optical sensor
- 7** USB-C port – for charging only
- 8** Exchangeable handle label
- 9** Docking station with protective cap for the print head

